

SHIELDING & GLARE CONTROL LINEALUX L5 RANGE





SELECT INSTALLATION

Louvre Go to Section A

Single Sided Visor ► Go to Section B

 There are a variety of shielding and glare control options available for Lumascape's Linealux L5 Even though the luminaire comes in different length, the installation process for the shielding and glare control accessories is the same for all of them.

READ ALL SAFETY INSTRUCTIONS FIRST

- > Follow instructions carefully, failure to do so will void warranty.
- > Luminaire is factory sealed, opening luminaire will void warranty.

LUMASCAPE ASIA PACIFIC Brisbane Technology Park, 18 Brandl Street, Eight Mile Plains, QLD 4113, Australia Phone +61 7 3854 5000 | Fax +61 7 3854 5001 | Email: sales@lumascape.com.au | www.lumacape.com

1/4




SHIELDING & GLARE CONTROL LINEALUX L5 RANGE




Section A - Install Louvre

Make sure locking screws are loosened before you begin. Slide the louvre over the luminaire body as shown.

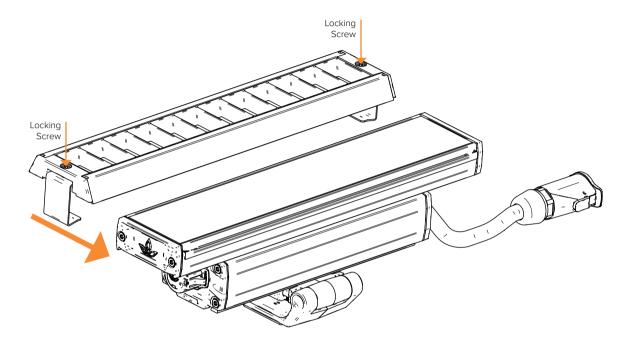

Secure the louvre tightening the locking screws.

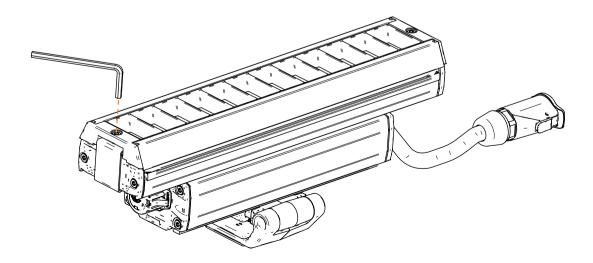




SHIELDING & GLARE CONTROL LINEALUX L5 RANGE



Section B - Install Single or Double Sided Visor

Please note that the sine sided visor and the thre sided visor are installed in exactly the same manner.

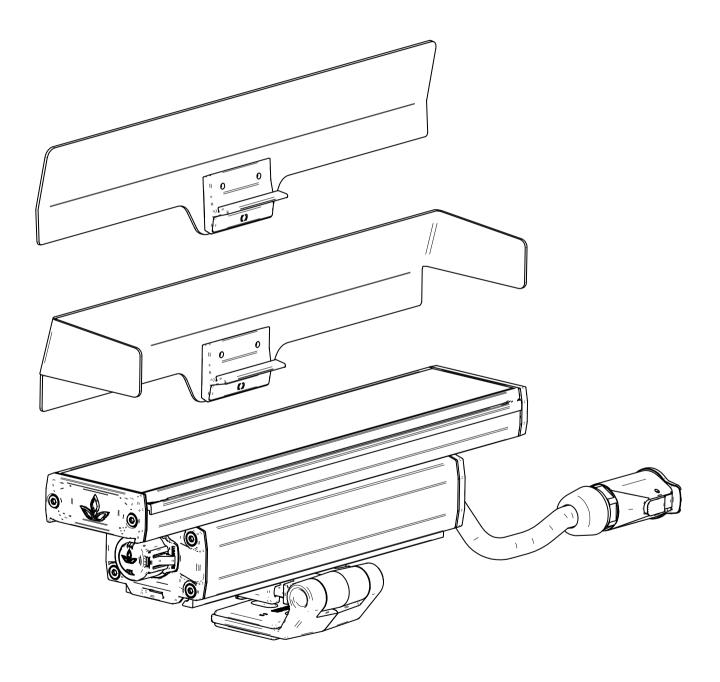





SHIELDING & GLARE CONTROL LINEALUX L5 RANGE



Slide the key on the visor into the groove on the luminaire. See end view for details.

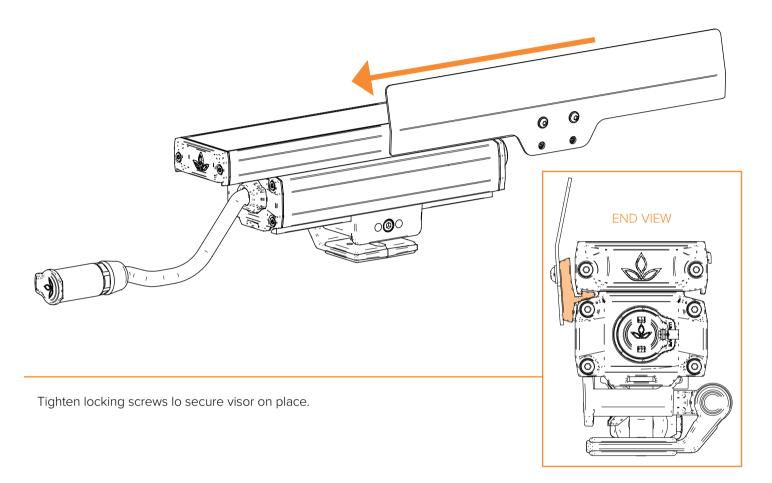

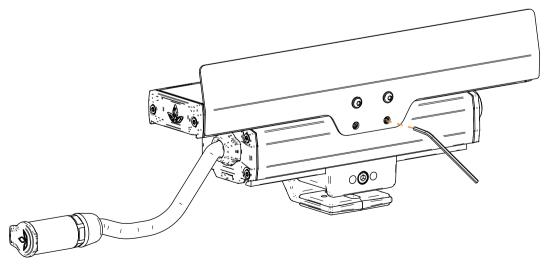

LUMASCAPE ASIA PACIFIC Brisbane Technology Park, 18 Brandl Street, Eight Mile Plains, QLD 4113, Australia Phone +61 7 3854 5000 | Fax +61 7 3854 5001 | Email: sales@lumascape.com.au | www.lumacape.com

4/4