

INSTALLATION INSTRUCTIONS

ADJUSTABLE SPOTLIGHT





READ ALL SAFETY INSTRUCTIONS FIRST

- > Follow instructions carefully, failure to do so will void warranty.
- > Ensure installation complies with local law and applicable standards.
- > Input voltage is 120-277 V AC, 50/60 Hz
- > Only use Lumascape power supply, control equipment and leader cables.
- > Ensure mains input power is surge protected.

- > Never make connections whilst the power is connected.
- > Do not make modifications or alter the product.
- > Keep luminaire and connections clean and free of debris and moisture.
- > It is the installers responsibility that the installation is adequately sealed to avoid moisture ingress.

LUMASCAPE ASIA PACIFIC Brisbane Technology Park, 18 Brandl Street, Eight Mile Plains, QLD 4113, Australia Phone +617 3854 5000 | Fax +617 3854 5001 | Email: sales@lumascape.com.au | www.lumacape.com


LUMASCAPE NORTH AMERICA 1300 Industrial Road, Unit #19, San Carlos, CA 94070, USA Phone +1 650 595 5862 | Fax +1 650 595 5820 | Email: info@lumascape.com | www.lumacape.com



INSTALLATION INSTRUCTIONS

ADJUSTABLE SPOTLIGHT



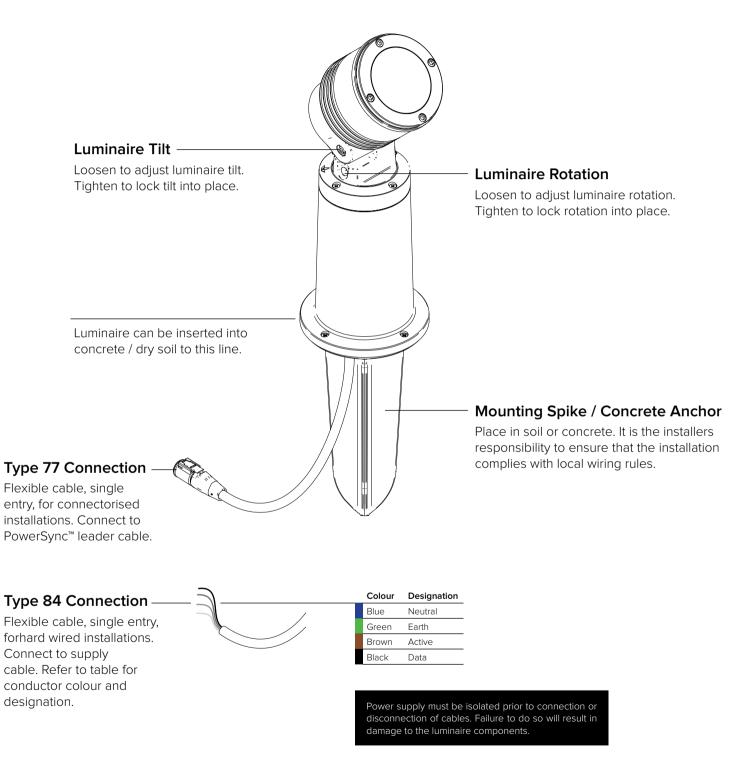

LUMASCAPE ASIA PACIFIC Brisbane Technology Park, 18 Brandl Street, Eight Mile Plains, QLD 4113, Australia Phone +617 3854 5000 | Fax +617 3854 5001 | Email: sales@lumascape.com.au | www.lumacape.com

LUMASCAPE NORTH AMERICA 1300 Industrial Road, Unit #19, San Carlos, CA 94070, USA Phone +1 650 595 5862 | Fax +1 650 595 5820 | Email: info@lumascape.com | www.lumacape.com

Products and specifications are subject to change without notice.

IN0181 N181205

2/2