


# INSTALLATION INSTRUCTIONS

## ACCESSORIES K6 & K8


### 30° Visor

For **K6** LS6253  
For **K8** LS6256

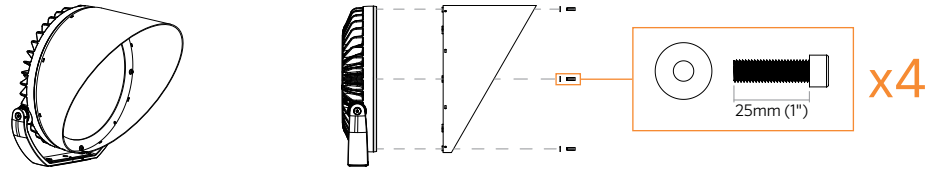


### Snoot

For **K6** LS6254  
For **K8** LS6257

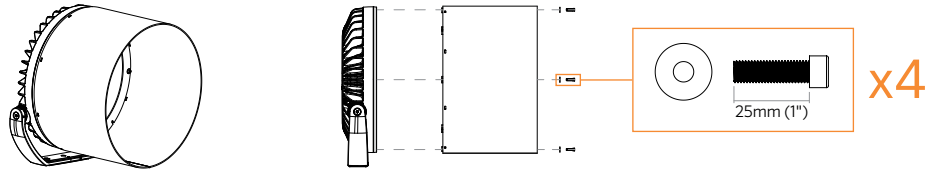


### Coss Hatch Louver

For **K6** LS6252  
For **K8** LS6255

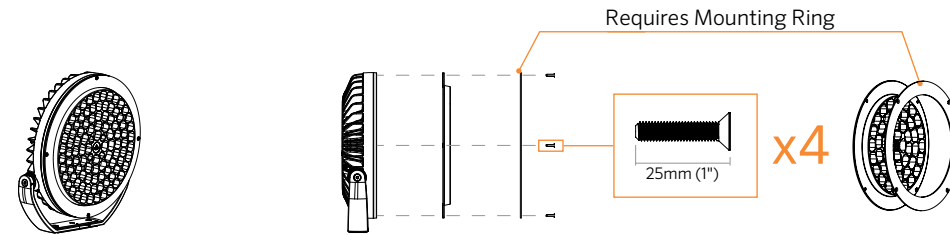



### Coss Hatch Louver + 30° Visor

For **K6** LS6252 + LS6253  
For **K8** LS6255 + LS6256

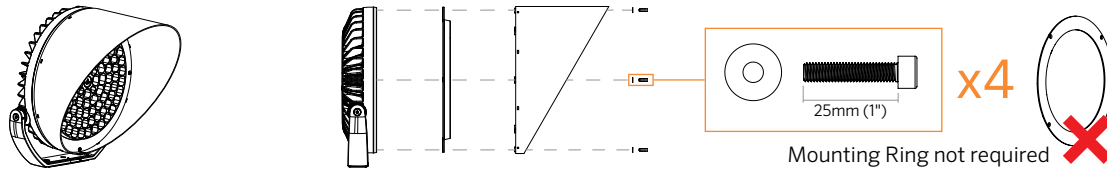

### Coss Hatch Louver + Snoot

For **K6** LS6252 + LS6254  
For **K8** LS6255 + LS6257

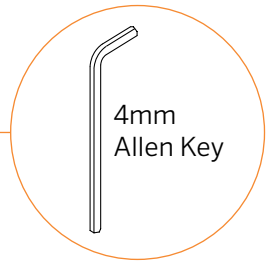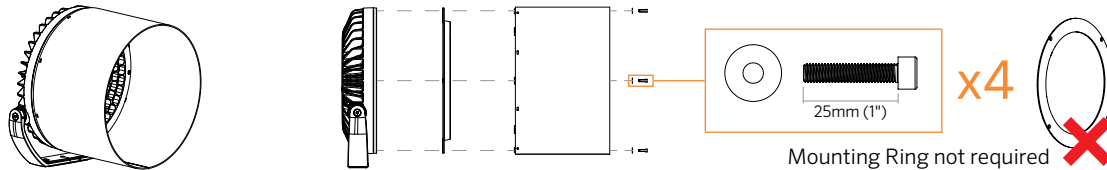

### Torque

For **K6 & K8**  
53 in-lbs (6 Nm)

[lumacape.com](http://lumacape.com)