

**A** **START HERE** **IMPORTANT INSTRUCTIONS**

For Opening and Re-sealing fixture with pre-install kit

Warning: The Luminaire should only be used complete with its protective shield (cover)  
All connections must be kept dry; failure to do so may result in product reliability issues

Lumascap Lighting Industries Pty Ltd  
38-44 Enterprise Street, Cleveland, QLD 4163, Australia  
PO Box 1875, Cleveland D.C., QLD 4163, Australia  
T 07 3286 2299  
F 07 3286 6599  
E sales@lumascap.com.au  
W www.lumascap.com.au

Thank you for taking the time to read this, it will save you time and money.

First, some simple rules.

- Do not use your battery drill
- Do not use silicone sealant
- Keep all surfaces clean
- Keep all foreign material out of the fixture

1



1. Clear area around fixture of loose dirt and debris, and wipe the fixture off with clean rag

2



2. Clean out socket head screws with a small pointed object

3



3. Ensure allen-key is in good condition and loosen each screw one turn only, repeat once again and then just remove each screw

4



4. Use allen-key to lift off cover

5




5. Place lid up-side-down on clean rag

6



6. Clean out rim, remove any foreign objects from fixture

7

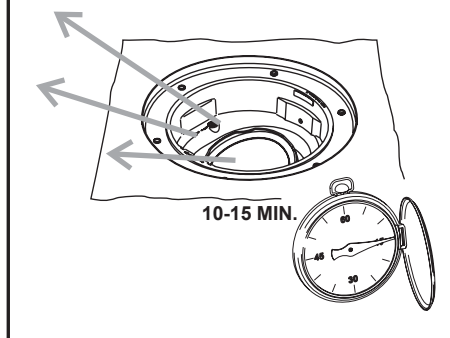

7. Run Fixture.  
Allow to burn for 10-15 minutes without lid attached to allow any moisture in fixture to evaporate.

Further information over page

www.lumascap.com.au



LUMASCAPE

MODELS    INGROUND AND BRACKET MOUNT  
LUMINAIRES  
STAINLESS STEEL

A.C.N. 010 572 773

# B IMPORTANT INSTRUCTIONS

## For Opening and Re-sealing fixture with pre-install kit

Warning: The Luminaire should only be used complete with its protective shield (cover)  
All connections must be kept dry; failure to do so may result in product reliability issues

LumascapE Lighting Industries Pty Ltd  
38-44 Enterprise Street, Cleveland, QLD 4163, Australia  
PO Box 1875, Cleveland D.C., QLD 4163, Australia  
T 07 3286 2299  
F 07 3286 6599  
E sales@lumascapE.com.au  
W www.lumascapE.com.au

**8**

**8. Wipe seal clean, if necessary disassemble the seal and wash in clean water then dry thoroughly**

**9**

**9. Ensure glass bevel faces top of lid so that the glass and trim are flush**

**10**

**10. Ensure socket head screws are free of dirt and debris and are in good condition**

**11**

**11. Insert 5 screws all the way into cover, leaving one hole without screw. Place allen-key in 6th cover hole**

**12**

**12. Place allen-key in 6th cover hole**

**13**

**13. Place cover on fixture lining up allen-key with any hole**

**14**


**14. Push lid down evenly ensuring allen-key remains vertical (at 90degrees to the cover)**

**15**


**15. Incrementally tighten screws. LumascapE recommends tightening in the following torque pattern to 2.5 - 3 N.m. DO NOT OVER TIGHTEN**

**NOTE:** Do not attempt to tighten any one screw fully, This will take longer and will not seat the seal properly.

**6 Screw Torque Pattern**



**4 Screw Torque Pattern**



[www.lumascapE.com.au](http://www.lumascapE.com.au)

LUMASCAPE HEAD OFFICE T 07 3286 2299 F 07 3286 6599  
 LUMASCAPE SYDNEY - NSW T 02 9519 6860 F 02 9519 8834  
 LUMASCAPE MELBOURNE - VIC T 03 9686 1900 F 03 9686 1700

H.I. LIGHTING LUMASCAPE AGENT - WA T 08 9321 5422 F 08 9321 5881

LIGHTING PARTNERS AUSTRALIA LUMASCAPE AGENT - SA T 08 8232 0074 F 08 8232 0076

NQ LIGHTING LUMASCAPE AGENT - NTH QLD T 07 4031 4490 F 07 4031 5933

ECC LIGHTING LUMASCAPE AGENT - NZ T 09 379 9680 F 09 308 9328

LUMASCAPE USA INC Free Call 1-866-655-LUMA(5822) T 1-(650)-595-LUMA(5822) 1-(650)-595-5820

## IMPORTANT SAFETY INSTRUCTIONS

### WARNING - To reduce the risk of FIRE or INJURY:

1. Luminaires and transformers to be installed by qualified installers only.
2. Luminaires to be used for intended purpose only. e.g Wall Mount fittings must be wall mounted.
3. Luminaires can become very hot. Use discretion in placement.
4. Do not touch hot lens, guard, or enclosure.
5. CAUTION - HOT SURFACE. Keep away from curtains and other combustible material.
6. Turn Off/Unplug and allow to cool before replacing lamp.
7. Keep lamp away from materials that may burn.
8. Never touch lamp with bare fingers. Oil from skin may damage lamp. Hold lamp with soft cloth when installing or replacing.
9. Do not operate the luminaires with a missing or damaged parts.
10. Replace any cracked protective shield
11. Use only lamp type, voltage and wattage as specified by Lumascap on the product label.
12. Use only genuine Lumascap parts to replace damaged or missing components.
13. Luminaires supplied with Loctite Silver Grade Anti Seize lubricant on threads. Reapply if needed.
14. Refer to instructions for installation and operating requirements.
15. Ensure installation complies with local regulations

### SAVE THESE INSTRUCTIONS.

LUMASCAPE  
 HEAD OFFICE - QLD  
 Tel (07) 3286 2299  
 Fax (07) 3286 6599

LUMASCAPE  
 SYDNEY - NSW  
 Tel (02) 9519 6860  
 Fax (02) 9519 8834

LUMASCAPE  
 MELBOURNE - VIC  
 Tel (03) 9686 1900  
 Fax (03) 9686 1700

LUMASCAPE USA INC.  
 SAN FRANCISCO - CA  
 Tel 1-(650)-595-5862  
 Fax 1-(650) 595-5820

H.I. LIGHTING  
 LUMASCAPE AGENT - WA  
 Tel (08) 9321 5422  
 Fax (08) 9321 5881

LIGHTING PARTNERS AUSTRALIA  
 LUMASCAPE AGENT - SA  
 Tel (08) 8232 0074  
 Fax (08) 8232 0076

NQ LIGHTING  
 LUMASCAPE AGENT - NTH QLD  
 Tel (07) 4031 4490  
 Fax (07) 4031 5933

ECC LIGHTING  
 LUMASCAPE AGENT - NZ  
 Tel (09) 379 9680  
 Fax (09) 308 9328